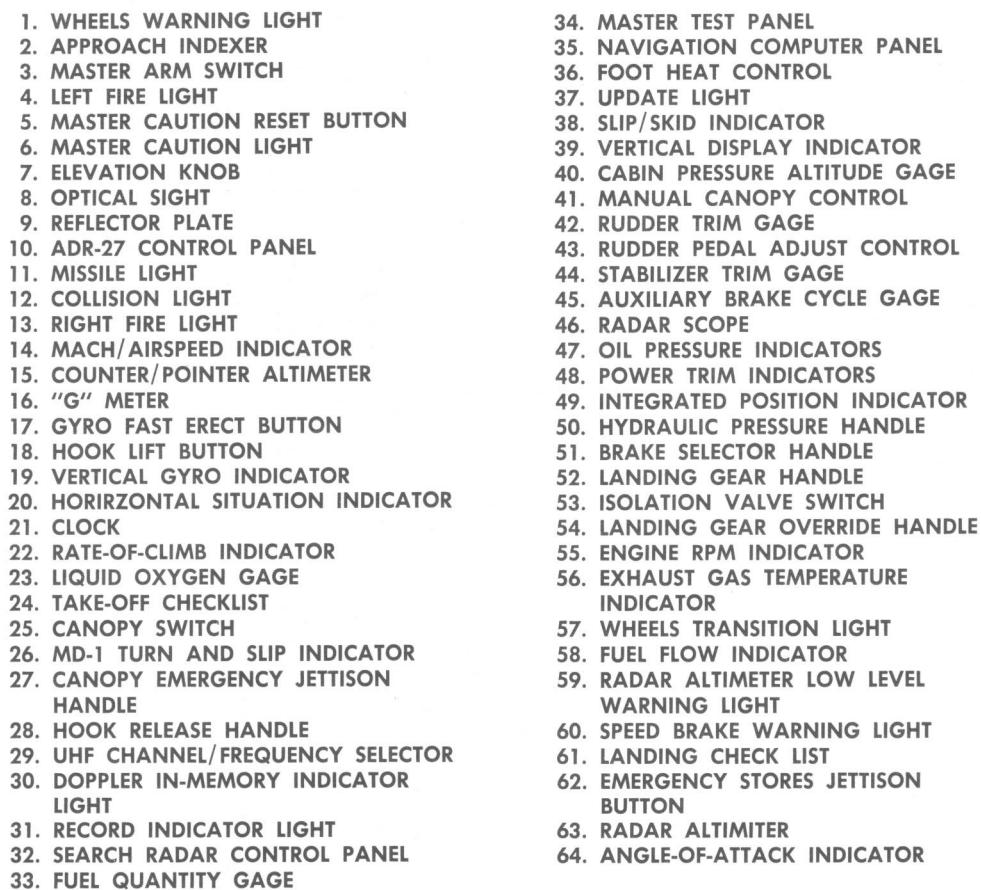


- 
1. WHEELS WARNING LIGHT
  2. APPROACH INDEXER
  3. MASTER ARM SWITCH
  4. LEFT FIRE LIGHT
  5. MASTER CAUTION RESET BUTTON
  6. MASTER CAUTION LIGHT
  7. ELEVATION KNOB
  8. OPTICAL SIGHT
  9. REFLECTOR PLATE
  10. ADR-27 CONTROL PANEL
  11. MISSILE LIGHT
  12. COLLISION LIGHT
  13. RIGHT FIRE LIGHT
  14. MACH/AIRSPED INDICATOR
  15. COUNTER/POINTER ALTIMETER
  16. "G" METER
  17. GYRO FAST ERECT BUTTON
  18. HOOK LIFT BUTTON
  19. VERTICAL GYRO INDICATOR
  20. HORIZONTAL SITUATION INDICATOR
  21. CLOCK
  22. RATE-OF-CLIMB INDICATOR
  23. LIQUID OXYGEN GAGE
  24. TAKE-OFF CHECKLIST
  25. CANOPY SWITCH
  26. MD-1 TURN AND SLIP INDICATOR
  27. CANOPY EMERGENCY JETTISON HANDLE
  28. HOOK RELEASE HANDLE
  29. UHF CHANNEL/FREQUENCY SELECTOR
  30. DOPPLER IN-MEMORY INDICATOR LIGHT
  31. RECORD INDICATOR LIGHT
  32. SEARCH RADAR CONTROL PANEL
  33. FUEL QUANTITY GAGE
  34. MASTER TEST PANEL
  35. NAVIGATION COMPUTER PANEL
  36. FOOT HEAT CONTROL
  37. UPDATE LIGHT
  38. SLIP/SKID INDICATOR
  39. VERTICAL DISPLAY INDICATOR
  40. CABIN PRESSURE ALTITUDE GAGE
  41. MANUAL CANOPY CONTROL
  42. RUDDER TRIM GAGE
  43. RUDDER PEDAL ADJUST CONTROL
  44. STABILIZER TRIM GAGE
  45. AUXILIARY BRAKE CYCLE GAGE
  46. RADAR SCOPE
  47. OIL PRESSURE INDICATORS
  48. POWER TRIM INDICATORS
  49. INTEGRATED POSITION INDICATOR
  50. HYDRAULIC PRESSURE HANDLE
  51. BRAKE SELECTOR HANDLE
  52. LANDING GEAR HANDLE
  53. ISOLATION VALVE SWITCH
  54. LANDING GEAR OVERRIDE HANDLE
  55. ENGINE RPM INDICATOR
  56. EXHAUST GAS TEMPERATURE INDICATOR
  57. WHEELS TRANSITION LIGHT
  58. FUEL FLOW INDICATOR
  59. RADAR ALTIMETER LOW LEVEL WARNING LIGHT
  60. SPEED BRAKE WARNING LIGHT
  61. LANDING CHECK LIST
  62. EMERGENCY STORES JETTISON BUTTON
  63. RADAR ALTIMETER
  64. ANGLE-OF-ATTACK INDICATOR